

**SECULIFE | IS | IT | IM**  
**Quick Setup Guide**

 




## Overview & Components

The SECULIFE IS simplifies quality assurance for diagnostic monitors and light boxes in medical applications in accordance with DIN V 6868-57. At the same time, it can be used to monitor room classes for medical tasks which are specified in the forthcoming DIN 6868-157 standard. Using the SECULIFE IS extends the interval specified in the standards for constancy testing of image displays to 6 month with regard to veiling luminance and maximum contrast.

### SECULIFE IS

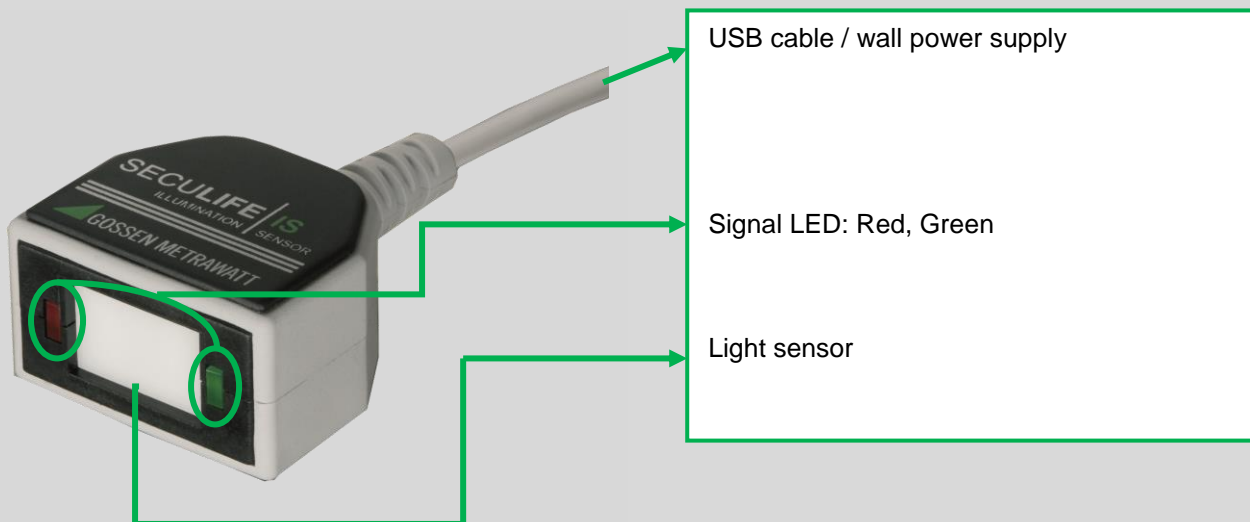

## Setup Guide

### Initial Start-Up

Initial start-up of the SECULIFE IS is quick and easy:

 
The instrument is connected with the included power pack, or to a USB port at the measuring PC, and is attached to the monitor screen.

The SECULIFE IS is attached to the front edge of the monitor with the help of the double-faced tape at the bottom. The front of the SECULIFE IS must be flush mounted to the front of the monitor. Please note that the SECULIFE IS can no longer be removed after attaching it to your monitor.

**WARNING!** Forcible removal of the monitoring unit will destroy the base plate of the SECULIFE IS!

- 1) Attach SECULIFE IS to the monitor
- 2) Via USB cable for power supply:  
connecting it to an available USB port or  
the included mains power pack
- 3) Pay attention to LEDs



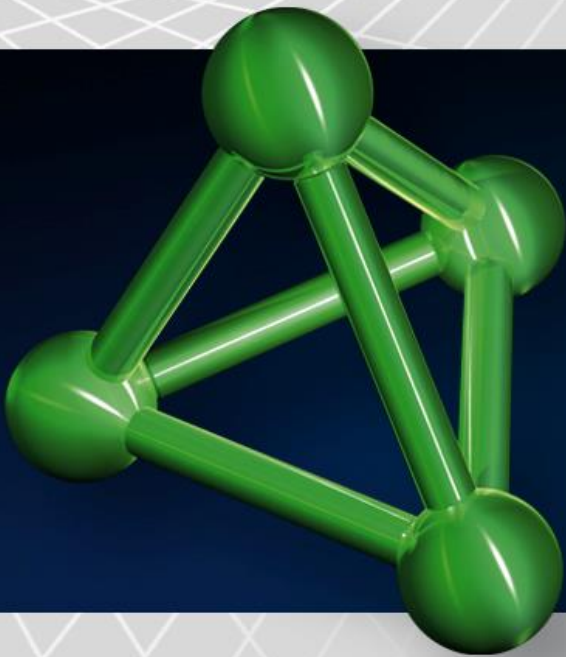

## Overview & Components


The SECULIFE IT is a high precision illuminance meter for use in hospitals and medical practices. It reliably measures the illuminance of daylight, as well as all types of artificial light sources, and is ideally suited for quality assurance: High precision in accordance with class B allows for use in certification applications and for inspection.

 
### SECULIFE IT





## Setup Guide

### Preparation

- 1) First insert the battery -included in the delivery contents- in the battery compartment.
- 2) When the battery warning symbol  appears in the display, the battery must be replaced.

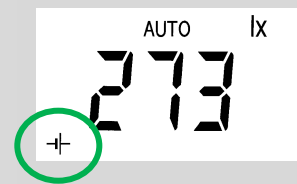

### Display

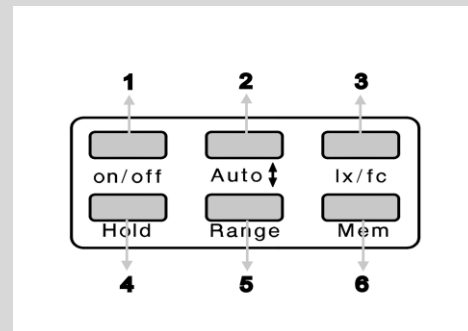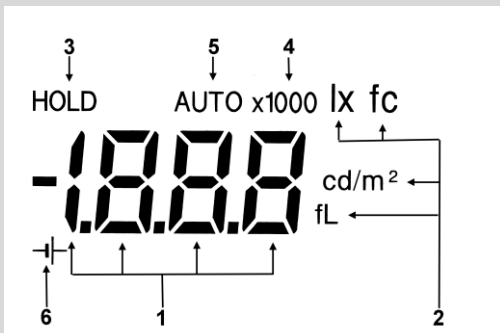  

1. Display of measuring value and Memory
2. Measuring Unit
3. Display "HOLD" indication / Buffer Storage
4. Multiplying factor for measuring value
5. Auto ranging – automatic range selection
6. Low Battery

1. Switch On/Off
2. Range key – Memory/Measuring range
3. lx/fc – Select measuring unit
4. HOLD – Function / Buffer Storage
5. Range key – Memory/Measuring range
6. MEM – Memory key


## Setup Guide
 
### Switch On – Make Measurement

- 1) Press down the **on/off** key and the SECULIFE IT will start up. In measuring and will immediately be measuring at 2 times per second.
- 2) The instrument is in the function „AUTO“, i.e. the SECULIFE IT will select the best suited measuring range for the existing light level.
- 3) By pressing one of the **range** keys, one of the measuring ranges can be set.
- 4) Scrolling up or down through additional measuring ranges is accomplished by briefly pressing one of the range keys.
- 5) If both keys are pressed and held simultaneously, the instrument is returned to “AUTO RANGING”.



### „Mem“– Save Measured Values in Memory

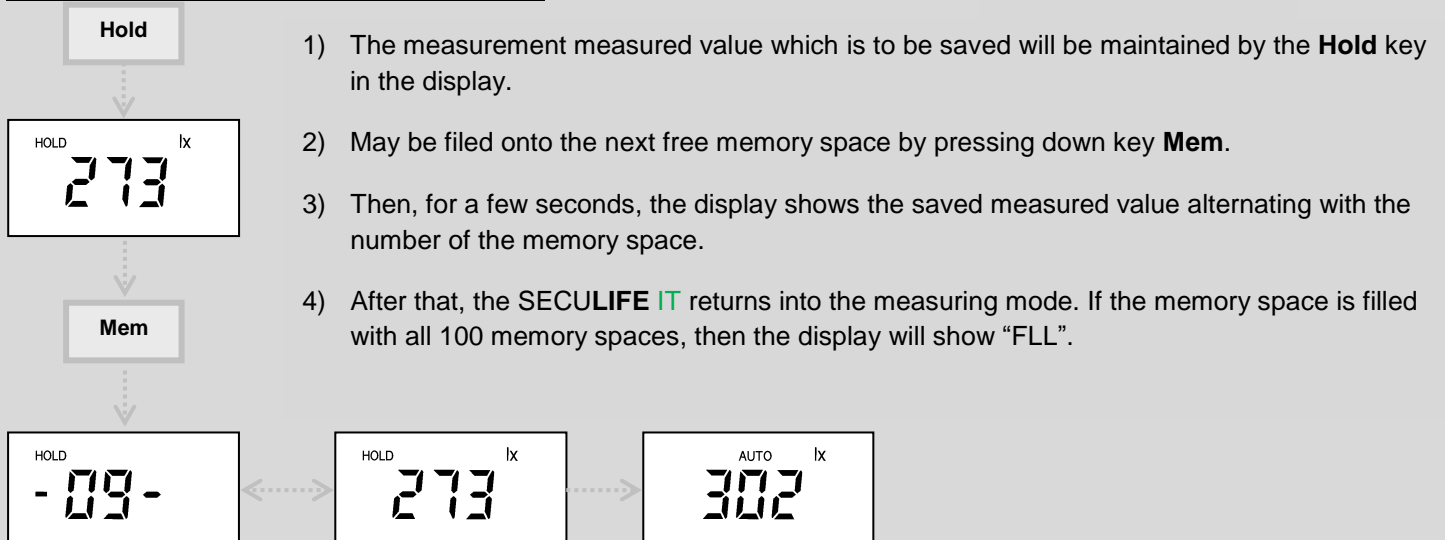



## Overview & Components

SECULIFE IM the precision measuring instrument. The device is designed for class B contact measurements. It's suitable for the performance of measurements at transilluminated and self-luminous surfaces, for example at monitor screen workstations and findings screens.


### SECULIFE IM



## Setup Guide


### Preparation

- 1) First insert the battery in the battery compartment.  
**Care should be taken to place the battery correctly according to the polarity.**

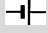
- 2) When the battery warning symbol  appears in the display, the battery must be replaced.



### Display

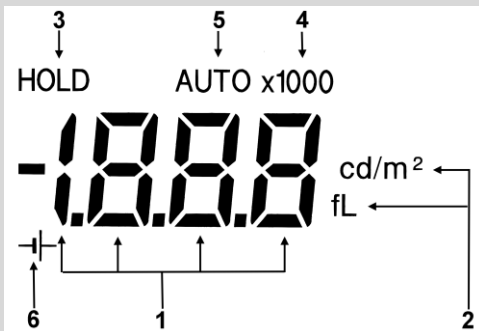 

 - 1) Display of measuring value and Memory indication
- 2) Measuring Unit
- 3) Display "HOLD" indication / Buffer Storage
- 4) Multiplying factor for measuring value
- 5) Auto ranging – automatic range selection
- 6) Low Battery

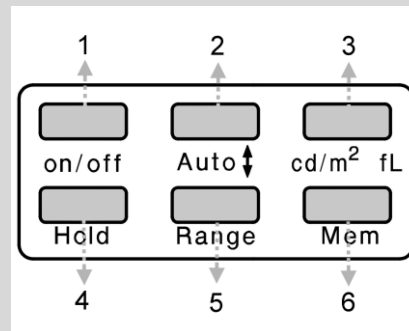

- 1) Switching on/off
- 2) Range key – Memory/Measuring range
- 3) cd/m<sup>2</sup> fL – Select measuring unit
- 4) Hold – Function
- 5) Range key – Memory/Measuring range
- 6) Mem – Memory key




## Setup Guide
 
### Switching on – Making Measurement

- 1) Press the **on/off** key and the SECULIFE IM is immediately in the measuring mode and is measuring at the rate of 2 times per second.
- 2) The instrument is in the function “AUTO”, i.e. the SECULIFE IM will select the best suited measuring range for the existing light level.
- 3) By pressing one of the **range** keys, one of the measuring ranges can be locked.
- 4) Browsing up or down through additional measuring ranges is accomplished by briefly pressing one of the **range** keys.
- 5) If both keys are pressed and held simultaneously, the instrument is returned to “AUTO RANGING”.



### „Mem“ – Storing measurement value in memory

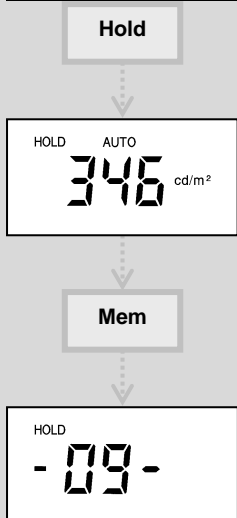

The measurement value to be memorized is locked by the **Hold** key in the display.

- 1) By pressing the key **Mem** you will enter the value to be stored in the free memory location.
- 2) An acoustic signal confirms “value stored in memory”.
- 3) The display indicates the stored measurement value alternating with the number of the memory location for a few seconds.
- 4) Subsequently, the SECULIFE IM will return to the measuring function.
- 5) When the memory is completely filled, the display will show “FLL”.