

Instruction Manual

DigRF 3Gbus

Decoder Software



DigRF 3Gbus Decoder Software Instruction Manual

© 2016 Teledyne LeCroy, Inc. All rights reserved.

Unauthorized duplication of Teledyne LeCroy, Inc. documentation materials other than for internal sales and distribution purposes is strictly prohibited. However, clients are encouraged to duplicate and distribute Teledyne LeCroy, Inc. documentation for their own internal educational purposes.

Teledyne LeCroy is a trademark of Teledyne LeCroy, Inc., Inc. Other product or brand names are trademarks or requested trademarks of their respective holders. Information in this publication supersedes all earlier versions. Specifications are subject to change without notice.

926370 Rev B
April 2016

Contents

- About the DigRF 3G Option 1**
- Serial Decode 2**
 - Bit-level Decoding 2
 - Logical Decoding 2
 - Message Decoding 2
 - User Interaction 2
 - Decoding Workflow 3
 - Decoder Setup 3
 - DigRF 3G Decoder Settings 4
 - Failure to Decode 5
 - Serial Decode Dialog 5
 - Reading Waveform Annotations 6
 - Serial Decode Result Table 7
 - Table Rows 7
 - Table Columns 7
 - DigRF 3G Result Table 8
 - Using the Result Table 9
 - Zoom & Search 9
 - View Details 9
 - Navigate 9
 - Customizing the Result Table 10
 - Exporting Result Table Data 10
 - Searching Decoded Waveforms 11
 - Basic Search 11
 - Advanced Search 11
 - DigRF 3G I & Q Constellation Diagrams 12
- Service Centers 13**

About This Manual

Teledyne LeCroy offers a wide array of toolsets for decoding and debugging serial data streams. These toolsets may be purchased as optional software packages, or are provided standard with some oscilloscopes.

This manual explains the basic procedures for using serial data decoder software options.

This manual is presented with the assumption that:

- You have purchased and installed one of the serial data products described in this manual.
- You have a basic understanding of the serial data standard physical and protocol layer specifications, and know how these standards are used in embedded controllers.
- You have a basic understanding of how to use an oscilloscope, and specifically the Teledyne LeCroy oscilloscope on which the option is installed. Only features directly related to serial data decoding are explained in this manual.

Teledyne LeCroy is constantly expanding coverage of serial data standards and updating software. Some capabilities described in this documentation may only be available with the latest version of our firmware. You can download the free firmware update from:

teledynelecroy.com/support/softwaredownload

While some of the images in this manual may not exactly match what is on your oscilloscope display—or may show an example taken from another standard—be assured that the functionality is identical, as much functionality is shared. Product-specific exceptions will be noted in the text.

About the DigRF 3G Option

The DigRF 3Gbus D option displays the digital conversion of I and Q RF signals, then decodes the entire DigRF 3G protocol frame structure. The extracted information is displayed over the actual physical layer waveforms, color-coded to provide fast, intuitive understanding of the relationship between message frames and other, time synchronous events.

The DigRF 3Gbus decoder may be installed on the same instrument as the MIPI D-PHYbus options to provide a complete MIPI debug toolset. Viewing the application layer of DigRF 3G signals next to the physical layer signals provides a unique view that bus analyzers cannot.

Serial Decode

The algorithms described here at a high level are used by all Teledyne LeCroy serial decoders sold for oscilloscopes. They differ slightly between serial data signals that have a clock embedded in data and those with separate clock and data signals.

Bit-level Decoding

The first software algorithm examines the embedded clock for each message based on a default or user-specified vertical threshold level. Once the clock signal is extracted or known, the algorithm examines the corresponding data signal at the predetermined vertical level to determine whether a data bit is high or low. The default vertical level is set to 50% and is determined from a measurement of peak amplitude of the signals acquired by the oscilloscope. For most decoders, it can also be set to an absolute voltage level, if desired. The algorithm intelligently applies a hysteresis to the rising and falling edge of the serial data signal to minimize the chance of perturbations or ringing on the edge affecting the data bit decoding.



Note: Although the decoding algorithm is based on a clock extraction software algorithm using a vertical level, the results returned are the same as those from a traditional protocol analyzer using sampling point-based decode.

Logical Decoding

After determining individual data bit values, another algorithm performs a decoding of the serial data message after separation of the underlying data bits into logical groups specific to the protocol (Header/ID, Address Labels, Data Length Codes, Data, CRC, Parity Bits, Start Bits, Stop Bits, Delimiters, Idle Segments, etc.).

Message Decoding

Finally, another algorithm applies a color overlay with annotations to the decoded waveform to mark the transitions in the signal. Decoded message data is displayed in tabular form below the grid. Various compaction schemes are utilized to show the data during a long acquisition (many hundreds or thousands of serial data messages) or a short acquisition (one serial data message acquisition). In the case of the longest acquisition, only the most important information is highlighted, whereas in the case of the shortest acquisition, all information is displayed with additional highlighting of the complete message frame.

User Interaction

Your interaction with the software in many ways mirrors the order of the algorithms. You will:

- Assign a protocol/encoding scheme, an input source, and a clock source (if necessary) to one of the four decoder panels using the Serial Data and Decode Setup dialogs.
- Complete the remaining dialogs required by the protocol/encoding scheme.
- Work with the decoded waveform, result table, and measurements to analyze the decoding.

Decoding Workflow

We recommend the following workflow for effective decoding:

1. Connect your data and strobe/clock lines (if used) to the oscilloscope.
2. Set up the decoder using the lowest level decoding mode available (e.g., Bits).
3. Acquire a sufficient burst of relevant data. The data burst should be reasonably well centered on screen, in both directions, with generous idle segments on both sides.



Note: See [Failure to Decode](#) for more information about the required acquisition settings. A burst might contain at most 100000 transitions, or 32000 bits/1000 words, whichever occurs first. This is more a safety limit for software engineering reasons than a limit based on any protocol. We recommend starting with much smaller bursts.

4. Stop the acquisition, then run the decoder.
5. Use the various decoder tools to verify that transitions are being correctly decoded. Tune the decoder settings as needed.
6. Once you know you are correctly decoding transitions in one mode, continue making small acquisitions of five to eight bursts and running the decoder in higher level modes (e.g., Words). The decoder settings you verify on a few bursts will be reused when handling many packets.
7. Run the decoder on acquisitions of the desired length.

When you are satisfied the decoder is working properly, you can disable/enable the decoder as desired without having to repeat this set up and tuning process, provided the basic signal characteristics do not change.

Decoder Setup


Use the Decode Setup dialog and its protocol-related subdialogs to preset decoders for future use. Each decoder can use different (or the same) protocols and data sources, or have other variations, giving you maximum flexibility to compare different signals or view the same signal from multiple perspectives.



Tip: After completing setup for one decoder, you can quickly start setup for the other decoders by using the buttons at the left of the Decode Setup dialog to change the Decode # .

1. Touch the **Front Panel Serial Decode button** (if available on your oscilloscope), or choose **Analysis > Serial Decode** from the oscilloscope menu bar. Open the **Decode Setup** dialog.
2. Select the **data source (Src 1)** to be decoded and the **Protocol** to decode.
3. If required by the protocol, also select the **Strobe** or **Clock** source. (These controls will simply not appear if not relevant.)
4. Define the bit- and protocol-level decoding on the DigRF 3G subdialog next to the Decode Setup dialog.

DigRF 3G Decoder Settings

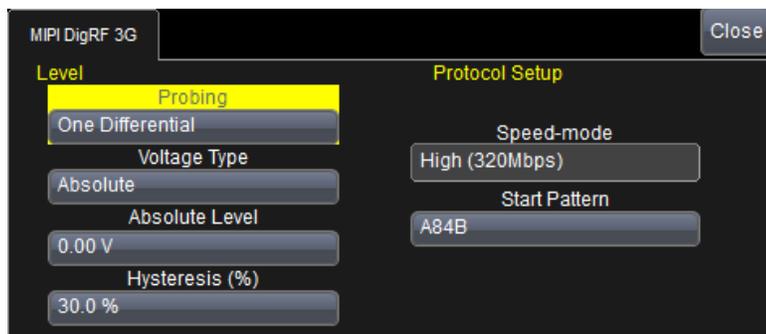

Select your **Probing** configuration, either One Differential or Two Single Ended probes.

 **Note:** The number of Source Selectors on the Decode Setup dialog changes to accommodate your probing selection. Be sure to select an input for each source.

Enter the vertical **Level** used to determine the edge crossings of the signal. This value will be used to determine the bit-level decoding. Level is normally set as a percentage of amplitude, and defaults to 50%. When working in percent, all values are proportional to the 100% signal amplitude. Level can alternatively be set as an absolute voltage by changing the **Voltage Type** to absolute. The set level appears as a dotted horizontal line across the oscilloscope grid. If your initial decoding indicates that there are a number of error frames, make sure that the Level is set to a reasonable value.

 **Note:** Percent mode is easy to set up because the software immediately determines the optimal threshold. However, on poor signals Percent mode can fail and lead to bad decodes; it might then help to use Absolute mode. On very long signals, Percent mode adds computational load. If performance is an issue, it might be beneficial to switch to Absolute mode.

In **Hysteresis**, enter the amount the signal may rise or fall without affecting bit transition as a percentage of a vertical division (not waveform amplitude). This can help to stabilize the decoding on noisy signals.

Choose the **Speed-mode** of the data stream from one of the standard speeds: Low (6.5Mbps), Medium (26Mbps), or High (320Mbps).

In **Start Pattern**, enter the hexadecimal value of the pattern upon which to begin the decoding.

Failure to Decode

Three conditions in particular may cause a decoder to fail, in which case a failure message will appear in the first row of the summary result table, instead of in the message bar as usual:

- **Under sampled.** If the sampling rate (SR) is insufficient to resolve the signal adequately based on the bit rate (BR) setup or clock frequency, the message "Under Sampled" will appear. The minimum SR:BR ratio required is 4:1. It is suggested that you use a slightly higher SR:BR ratio if possible, and use significantly higher SR:BR ratios if you want to also view perturbations or other anomalies on your serial data analog signal.
- **Too short acquisition.** If the acquisition window is too short to allow any meaningful decoding, the message "Too Short Acquisition" will appear. The minimum number of bits required varies from one protocol to another, but is usually between 5 and 50.
- **Too small amplitude.** If the signal's amplitude is too small with respect to the full ADC range, the message "Decrease V/Div" will appear. The required amplitude to allow decoding is usually one vertical division.

In each case, the decoding is turned off to protect you from incorrect data. Adjust your acquisition settings accordingly, then re-enable the decoder.



Note: It is possible that several conditions are present, but you will only see the first relevant message in the table. If you continue to experience failures, try adjusting the other settings.

Serial Decode Dialog

To first set up a decoder, go to the [Decode Setup dialog](#). Once decoders have been configured, use the Serial Decode dialog to quickly turn on/off a decoder or make minor modifications to the settings.

To turn on decoders:

1. Touch the **Front Panel Serial Decode button** (if available on your oscilloscope), or choose **Analysis > Serial Decode** from the oscilloscope menu bar to access the Serial Decode dialog.
2. On the same row as the **Decode #**, check **On** to enable the decoder.

As long as On is checked (and there is a valid acquisition), a [result table](#) and [decoded waveform](#) appear. The number of rows of data displayed will depend on the **Table#Rows** setting (on the Decode Setup dialog).

3. Optionally, modify the:
 - **Protocol** associated with the decoder.
 - **Data (Source)** to be decoded.

To turn off decoders: deselect the On boxes individually, or touch **Turn All Off**.

Reading Waveform Annotations

When a decoder is enabled, an annotated waveform appears on the oscilloscope display, allowing you to quickly read the results of the decoding. A colored overlay marks significant bit-sequences in the source signal. The overlay contains annotations corresponding to the Header/ID, Address, Labels, Data Length Codes, Data, CRC, Parity Bits, Start Bits, Stop Bits, Delimiters, Idle segments, etc. Annotations are customized to the protocol or encoding scheme.

The amount of information shown on an annotation is affected by the width of the rectangles in the overlay, which is determined by the magnification (scale) of the trace and the length of the acquisition. Zooming a portion of the decoder trace will reveal the detailed annotations.


These overlays appear on a DigRF 3G decoder waveform:

Annotation	Overlay Color (1)	Text (2)
Data Transmission	Navy Blue (behind other fields)	Data <channel>
Synch Bits	Yellow (olive green)	<byte>
Payload Size	Green	Payload Size = <number>
Clock Check	Brick Red	Time Accurate Strobe Mes...
Control Bits	Green	<bit>
Data	Aqua Blue	<byte>
Protocol Error	Red	Protocol Error

1. Combined overlays affect the appearance of colors.
2. Text in brackets < > is variable. The amount of text shown depends on your zoom factors.



Decoded waveform. At this resolution, little information appears on the overlay.

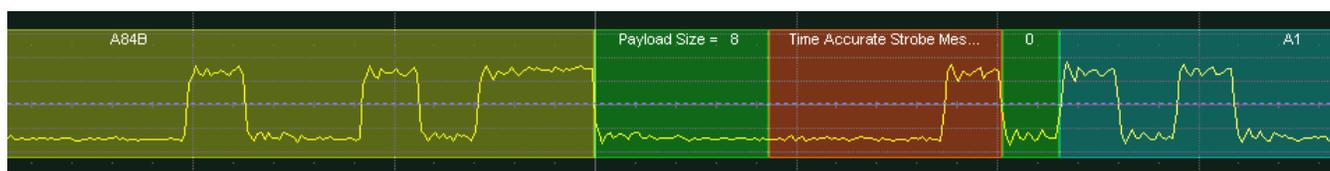

Zoom showing annotation details.

Serial Decode Result Table

By default, a table summarizing the decoder results appears below the grids whenever a decoder is enabled. The result table provides a view of data as decoded during the most recent acquisition, even when the number of bursts are too many to allow legible annotation on the waveform trace.

The table is displayed only when the **View Decode** checkbox is marked on the Decode Setup Dialog *and* a source signal has been decoded using that protocol.

You can [export result table data](#) to a .CSV file.

Table Rows

Each row of the table represents one index of data found within the acquisition. Exactly what this represents depends on the protocol and how you have chosen to "packetize" the data stream when configuring the decoder (frame, message, packet, etc.).



Note: For some decoders, it is even possible to turn off packetization, in which case all the decoded data appears on one row of the table.

See [Using the Result Table](#) for more information about how to interact with the table rows to view the decoding. Swipe the table up/down or use the scrollbar at the far right to navigate the table.

When multiple decoders are run at once, the index rows are combined in a summary table, ordered according to their acquisition time. The Protocol column is colorized to show which input source resulted in that index.

You can [change the number of rows](#) displayed on the table at one time. The default is five rows.

Table Columns

When a single decoder is enabled, the result table shows the protocol-specific details of the decoding. This **detailed result table** may be [customized](#) to show only those columns you want displayed.

Enabling two or more decoders switches the display to a combined table. A top-level **summary result table** (which cannot be changed) shows these columns of data for every decoding:

Column	Extracted or Computed Data
Index	Number of the line in the table
Time	Time elapsed from start of acquisition to start of message
Protocol	Protocol being decoded
Message	Message identifier bits
Data	Data payload
CRC	Cyclic Redundancy Check sequence bits
Status	Any decoder messages; content may vary by protocol

When you select the Index number from the summary result table, the detailed results for that index drops-in below it.

DigRF 3G Result Table

This extracted data appears on a DigRF 3G detailed result table. Columns can be hidden by [customizing the result table](#).

Column	Extracted or Computed Data
Index (always shown)	Number of the line in the table
Frame	Frame ID
Time	Time from start of acquisition to Start of Frame
Synch	Synchronization byte
LCTS	Channel data carried on
CTS/RTI	CTS or RTI number
TxRx	Tx if transmitter side message; Rx if receiver side message
Word Name	Decoded word name
Comment	Plain text description of frame
Payload Size	Number of bits
I Data	Decoded I data bytes
Q Data	Decoded Q data bytes
Payload	Decoded data bytes

MIPI DigRF...	Time	Synch	LCTS	CTS/RTI	Word Name	Comment	Payload...	Payload	I Data	Q Data
1	-43.841 µs A84B	Data Channel A	Data Channel A	1	(no name)...		256	FF EE 00 E6 FF 51 00 8A FF 29 FF E1 FF 82 FF 4F 00 2D FF 1F 00 C5...	-18	230
2	-29.072 µs A84B	Data Channel A	Data Channel A	1	(no name)...		256	FF F5 00 E7 FF 57 00 97 FF 20 FF F3 FF 74 FF 55 00 22 FF 12 00 BB...	-11	231
3	-14.302 µs A84B	Data Channel A	Data Channel A	1	(no name)...		256	00 0A 00 EF FF 64 00 A6 FF 23 00 04 FF 6C FF 5F 00 05 FF 20 00 A4...	10	239
4	467 ns A84B	Data Channel A	Data Channel A	1	(no name)...		256	00 18 00 F0 FF 73 00 B6 FF 23 00 13 FF 5B FF 6F FF FC FF 20 00 A0...	24	240
5	15.236 µs A84B	Data Channel A	Data Channel A	1	(no name)...		256	00 2C 00 F4 FF 79 00 C2 FF 1E 00 28 FF 55 FF 7D FF E9 FF 20 00 93...	44	244

Section of typical DigRF 3G detailed result table.

Customizing the Result Table

Follow these steps to change what data appears on the detailed result table:

1. Press the Front Panel **Serial Decode button** or choose **Analysis > Serial Decode**, then open the **Decode Setup tab**.
2. Touch the **Configure Table** button.
3. On the **View Columns** pop-up dialog, mark the columns you want to appear and clear those you wish to remove. Only those columns selected will appear on the oscilloscope display.



Note: If a selected column is not relevant to the decoding selections, the column will not appear in the table.

To return to the preset display, touch **Default**.

4. Touch the **Close** button when finished.

On some decoders, you may also use the View Columns pop-up to set a **Bit Rate Tolerance** percentage. When implemented, the tolerance is used to flag out-of-tolerance messages (messages outside the user-defined bitrate +/- tolerance) by colorizing in red the Bitrate shown in the table.

You may customize the size of the result table by changing the **Table # Rows** setting on the Decode Setup dialog. Keep in mind that the deeper the table, the more compressed the waveform display on the grid, especially if there are also measurements turned on.

Exporting Result Table Data

You can manually export the detailed result table data to a .CSV file:

1. Press the Front Panel **Serial Decode button**, or choose **Analysis > Serial Decode**, then open the **Decode Setup tab**.
2. Optionally, touch **Browse** and enter a new **File Name** and output folder.
3. Touch the **Export Table** button.

Export files are by default created in the D:\Applications\



Note: When a combined table is exported, a combined file is saved in D:\Applications\Serial Decode. Separate files for each decoder are saved in D:\Applications\

In addition, the oscilloscope Save Table feature will automatically create tabular data files with each acquisition trigger. The file names are automatically incremented so that data is not lost. Choose **File > Save Table** from the oscilloscope menu bar and select **Decodex** as the source. Make other file format and storage selections as you wish.

Searching Decoded Waveforms

Touching the Action toolbar **Search button** button on the Decode Setup dialog creates a 10:1 zoom of the center of the decoder source trace and opens the Search subdialog.

Touching the **any cell** of the result table similarly creates a zoom and opens Search, but of only that part of the waveform corresponding to the index (plus any padding).



Tip: In combined table mode, touch any cell *other than* Index and Protocol to create the zoom.

Basic Search

On the Search subdialog, select what type of data element to **Search for**. These basic criteria vary by protocol, but generally correspond to the columns of data displayed on the detailed decoder result table.

Optionally:

- Check **Use Value** and enter the **Value** to find in that column. If you do not enter a Value, Search goes to the beginning of the next data element of that type found in the acquisition.
- Enter a **Left/Right Pad**, the percentage of horizontal division around matching data to display on the zoom.
- Check **Show Frame** to mark on the overlay the frame in which the event was found.

After entering the Search criteria, use the **Prev** and **Next** buttons to navigate to the matching data in the table, simultaneously shifting the zoom to the portion of the waveform that corresponds to the match.

The touch screen message bar shows details about the table row and column where the matching data was found.


 Idx = 15 (decimal) found at Row 55 Column 0 going Left

Advanced Search

Advanced Search allows you to create complex criteria by using Boolean AND/OR logic to combine up-to-three different searches. On the Advanced dialog, choose the **Col(umns) to Search 1 - 3** and the **Value** to find just as you would a basic search, then choose the **Operator(s)** that represent the relationship between them.


DigRF 3G I & Q Constellation Diagrams

The installation of the DigRF 3Gbus-DMP option activates the **View I & Q** button on the main Decode Setup dialog when the DigRF 3G protocol is selected.

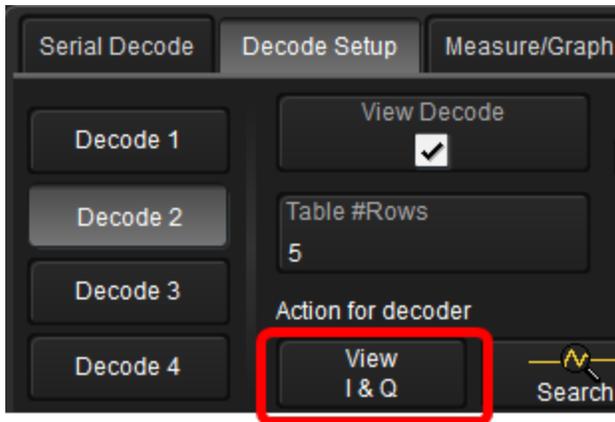

This feature enables you to generate a constellation (XY) diagram from the converted I and Q signals. The diagram appears next to the decoded waveform.

Touch **View I & Q** to display the View I & Q Wizard, then select **View Constellation (XY)**.

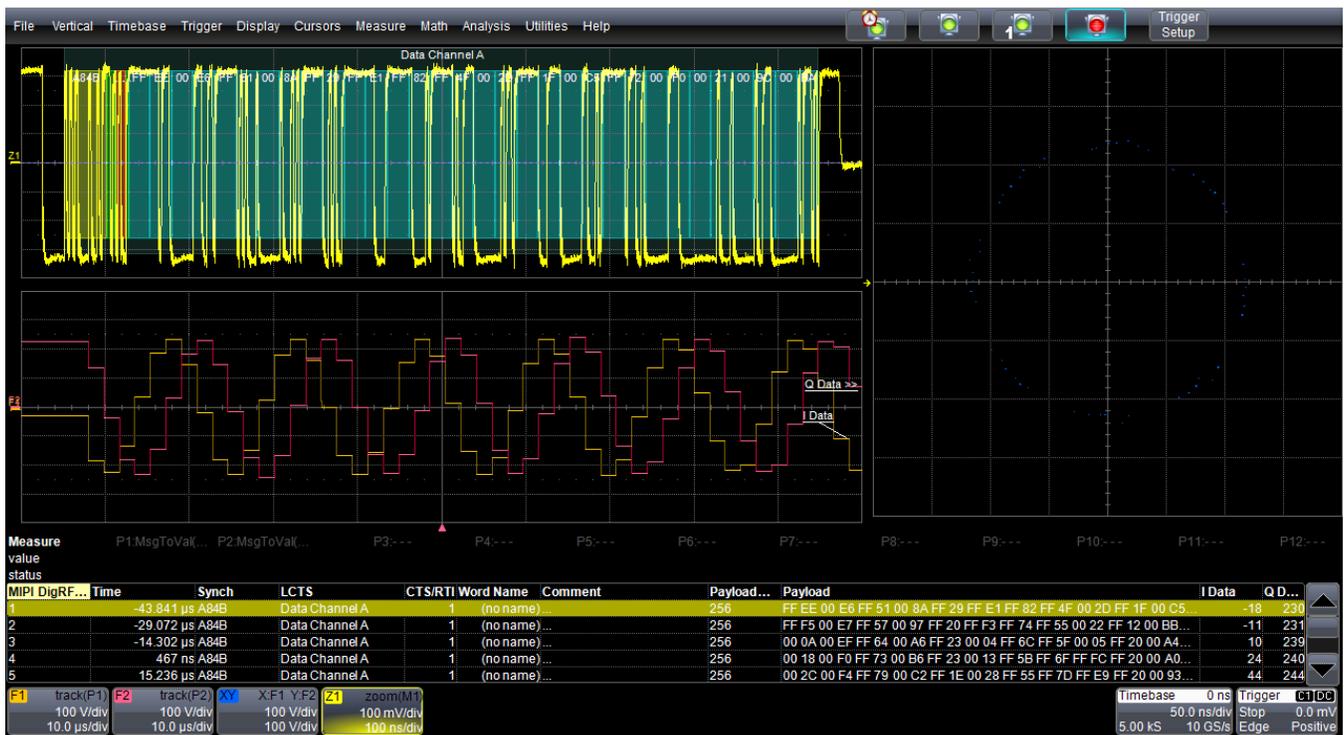

DigRF 3G I and Q display available with the -DMP option.

Service Centers

Our regional service centers are:

World Wide Corporate Office

Teledyne LeCroy
 700 Chestnut Ridge Road
 Chestnut Ridge, NY, 10977, USA
 teledynelecroy.com
 Sales and Service:
 Ph: 800-553-2769 / 845-425-2000
 FAX: 845-578-5985
 contact.corp@teledynelecroy.com
 Support:
 Ph: 800-553-2769
 support@teledynelecroy.com

US Protocol Solutions Group

Teledyne LeCroy
 3385 Scott Boulevard
 Santa Clara, CA, 95054, USA
 teledynelecroy.com
 Sales and Service:
 Ph: 800-909-7211 / 408-727-6600
 FAX: 408-727-0800
 protocolsales@teledynelecroy.com
 Support:
 Ph: 800-909-7112 / 408-653-1260
 psgsupport@teledynelecroy.com

European Headquarters

Teledyne LeCroy SA
 4, Rue Moïse Marcinhes
 Case postale 341
 1217 Meyrin 1
 Geneva, Switzerland
 teledynelecroy.com/europe
 Ph: + 41 22 719 2111
 FAX: + 41 22 719 2230
 contact.sa@teledynelecroy.com

China

LeCroy Corporation Beijing
 Rm. 2001, Unit A, Horizon Plaza
 No. 6, Zhichun Road, Haidian Dist.
 Beijing 100088, China
 www.lecroy.com.cn
 Sales:
 Ph: 86-10-82800318/0319/0320
 FAX:86-10-82800316
 Marketing.China@teledynelecroy.com
 Service:
 Rm. 2002
 Ph: 86-10-82800245
 Service.China@teledynelecroy.com

Korea

Teledyne LeCroy Korea
 10th fl. 333 Yeongdong-daero
 Gangnam-gu
 Seoul 135-280, Korea
 teledynelecroy.com/korea
 Ph: ++ 82 2 3452 0400
 FAX: ++ 82 2 3452 0490

Japan

Teledyne LeCroy Japan
 3F, Houbunshafuchu Bldg.
 3-11-5, Midori-cho, Fuchu-Shi
 Tokyo 183-0006, Japan
 teledynelecroy.com/japan
 Ph: + 81-42-402-9400
 FAX: + 81-42-402-9586

For a complete list of offices by country, including our sales & distribution partners, visit teledynelecroy.com/support/contact.



700 Chestnut Ridge Road
Chestnut Ridge, NY 10977
USA

teledynelecroy.com