




How to access **Qualistar+** remotely ?


Required material :

- Qualistar+ : CA8331/CA8333/CA8335/CA8336/CA8436
- Communication module(Wifi or not) from brand Silex Technology :
 - Model DS-520-AN (Wifi)
 - Model DS-600 (Ethernet)
- Your computer with « Power Analyzer Transfer 2 » et « SX Virtual link » software installed

Procedure :


- Install SX Virtual Link on your computer
- Connect Silex module to your network (via Wifi ou Ethernet) and to your **Qualistar+** via USB

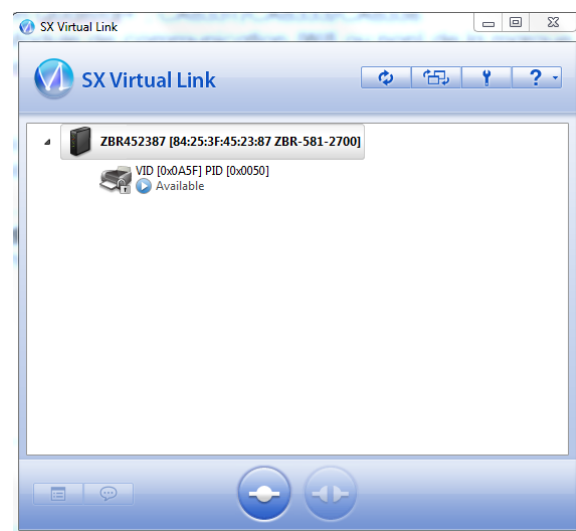

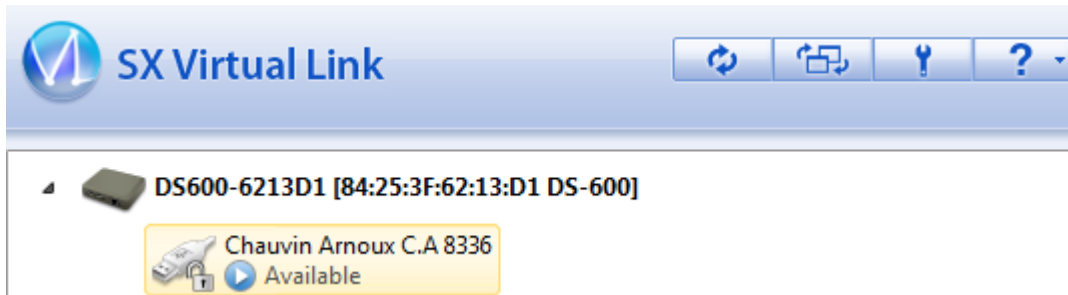


- **Qualistar+** appears in SX Virtual Link

- Choose the **Qualistar+** and click on « connect »

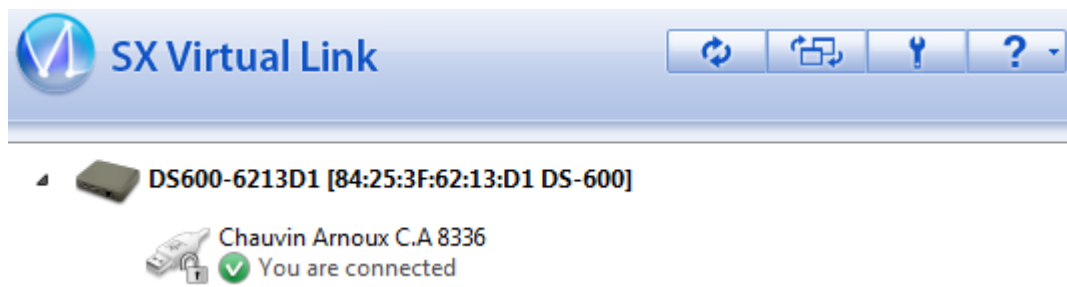

- Open PAT2 and connect **Qualistar+**

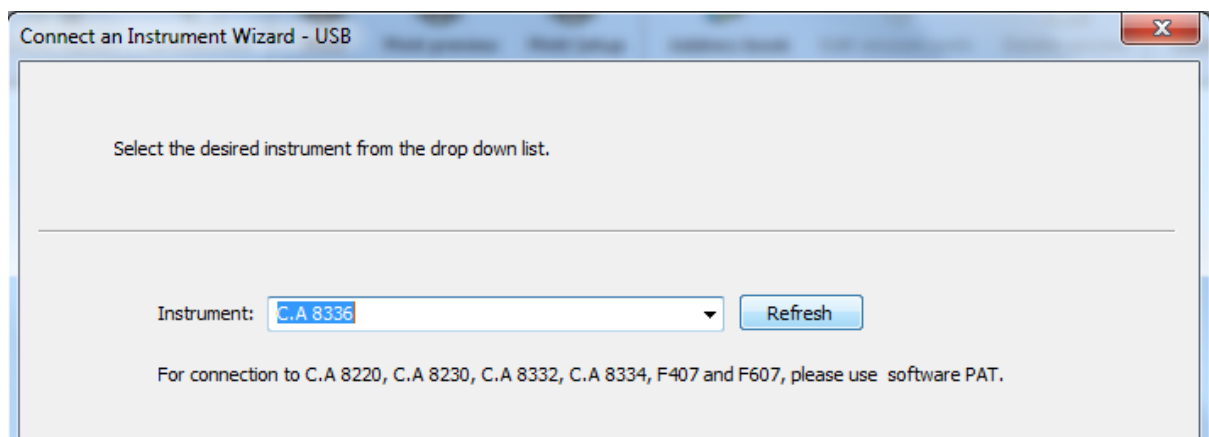

- **Qualistar+** is now connected and you can configure and access remotely. You can even download your datas remotely.