

# TORHEL 820

## Battery Load Unit



- **Lightweight**
- **Expandable system**
- **Rugged and reliable for field use**
- **Test without disconnecting the battery from the equipment it serves**

### Description

During a power outage, crucial telecommunication and radio equipment must be kept operating by batteries. However, the capacity of such batteries can drop significantly for a number of reasons before their calculated life expectancy is reached. Battery capacity should thus be checked to prevent expensive downtime in the event of a power failure.


The most reliable way to determine battery capacity is to conduct a discharge test. The TORHEL™820 features a unique design that combines efficiency with portability. Using TORHEL 820 you can discharge 24 and 48 V batteries at a current of 270 A, and 12 V batteries at 135 A. Moreover, two or more TORHEL 820 units and/or extra load units, TXL, can be linked together if you need higher current. Discharging proceeds at constant current, constant power or constant resistance, or in accordance with a pre-selected load profile.

The TORHEL 820 issues a warning and/or shuts down the test automatically when a) the voltage has dropped to a certain level, b) discharging has continued through a certain time interval or c) a certain amount of capacity has been dissipated.

### Application example


Testing can be carried out without disconnecting the battery from the equipment it serves. Via a DC clamp-on ammeter, TORHEL 820 measures total battery current while regulating it at a constant level.

The TORHEL 820 is connected to battery, the current and the voltage alarm level are set. After starting the discharge TORHEL 820 keeps the current constant at the preset level. When the voltage drops to a level slightly above the final voltage, TORHEL 820 issues an alarm. If the voltage drops so low that there is a risk for deep discharging the battery, TORHEL shuts down the test. The total voltage curve and the readings taken at the end of the test are stored in TORHEL 820. Later, using the TORHEL Win program, you can transfer these readings to your computer for storage, printout or export. If your PC is connected to TORHEL 820 during the test, TORHEL Win builds up a voltage curve on the screen in real time and displays the current, voltage and capacity readings. You can also control the test using TORHEL Win.

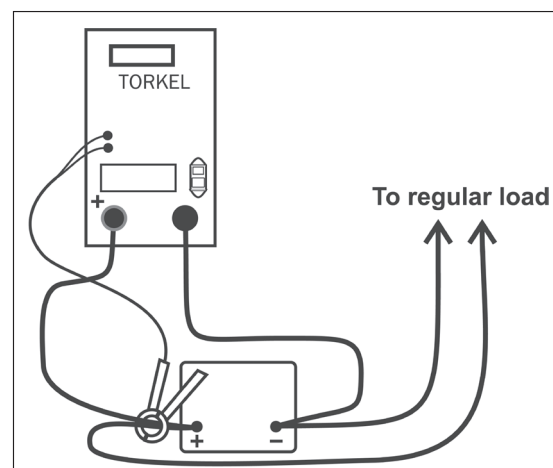

**Features and benefits**

1. **Display**
2. **External measurement input** used to measure current in an external path by means of a clamp-on ammeter or a current shunt.
3. **Keys** for operation and settings.
4. **Alarm output** equipped with a relay contact for triggering an external alarm device.
5. **Start/Stop input** used for starting and stopping discharging from an external device. Galvanically isolated.
6. **Indicating lamps**. Operating, Stop/Limit
7. **TXL output** used for control of TXL Extra Loads. Galvanically isolated.
8. **Serial port** used for connection to a PC or other controlling equipment.
9. **Voltage controlled circuit breaker** that connects / disconnects the loading circuits in TORDEL from the battery.
10. **Positive current connection** for battery being tested.
11. **Input for sensing voltage** at the battery terminals.
12. **Negative current connection** for battery being tested.
13. **Mains connector**, equipped with ON/OFF switch.

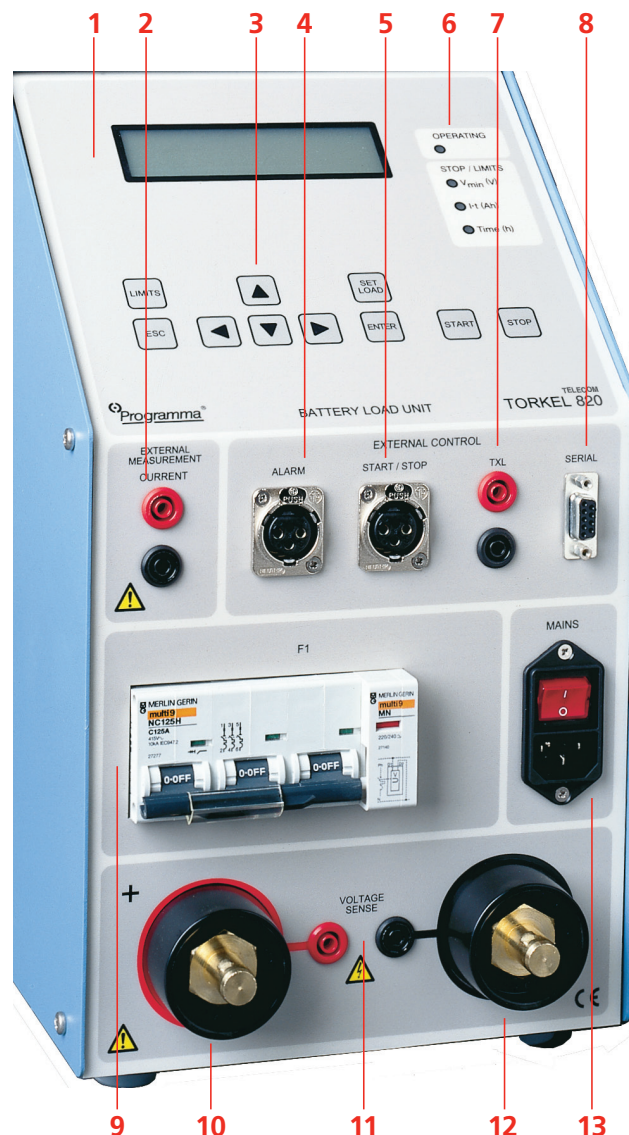

**Application examples with TORDEL/TXL systems**


TORDEL and TXL can be combined into systems to match up for different battery capacities. Here are two examples, you can find more in the section Battery Testing Accessories.

These resistive extra loads do not perform any regulating functions. They are designed for use together with TORDEL Battery Load Units. Their purpose is to provide higher load currents for use in constant current or constant power tests. Together, TORDEL and the TXL Extra Loads form a system that can discharge batteries with currents of up to several kA. TXL Extra Loads are connected directly to the battery, and TORDEL measures the total current using a clamp-on ammeter. TXL Extra Loads are shut down automatically when TORDEL is stopped.

**TORDEL/TXL -systems examples**

Max. constant current (A)	Number of TORDEL-units	Number of TXL-units
<b>TORDEL 820 + TXL830, 12 V battery (6 cells)<sup>1)</sup></b>		
234	1	1
571	1	4
918	2	6
<b>TORDEL 820 + TXL830, 24 V battery (12 cells)<sup>1)</sup></b>		
495	1	1
1170	1	4
1890	2	6
<b>TORDEL 820 + TXL850, 48 V battery (24 cells)<sup>1)</sup></b>		
499	1	1
1189	1	4
1918	2	6

1) Discharge from 2.15 V to 1.8 V per cell

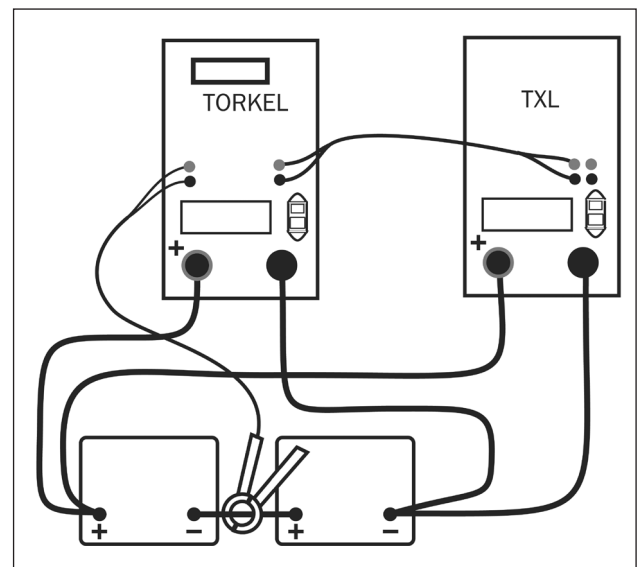

**TORDEL and the extra load TXL**

**Specifications TORHEL 820**

Specifications are valid at nominal input voltage and an ambient temperature of +25°C, (77°F). Specifications are subject to change without notice.

**Environment**

*Application field* The instrument is intended for use in high-voltage substations and industrial environments.

*Temperature*

*Operating* 0°C to +40°C (32°F to +104°F)  
*Storage & transport* -40°C to +70°C (-40°F to +158°F)

*Humidity* 5% – 95% RH, non-condensing

**CE-marking**

*LVD* 2006/95/EC  
*EMC* 2004/108/EC

**General**

*Mains voltage* 100 – 240 V AC, 50/60 Hz  
*Power consumption* 150 W (max)  
*Protection* Thermal cut-outs, automatic overload protection

*Dimensions*

*Instrument* 210 x 353 x 700 mm  
(8.3" x 13.9" x 27.6")  
*Transport case* 265 x 460 x 750 mm  
(10.4" x 18.1" x 29.5")

*Weight* 22.3 kg (49.2 lbs)  
40.4 kg (89.1 lbs) with accessories and transport case

*Display* LCD  
*Available languages* English, French, German, Spanish, Swedish

**Measurement section**

**Current measurement**

*Display range* 0.0 – 2999 A  
*Basic inaccuracy* ±(0.5% of reading +0.2 A)  
*Resolution* 0.1 A

**Internal current measurement**

*Range* 0 – 270 A

**Input for clamp-on ammeter**

*Range* 0 – 1 V  
*mV/A-ratio* Software settable, 0.3 to 19.9 mV/A  
*Input impedance* >1 MΩ

**Voltage measurement**

**Display range 0.0 – 60 V**

*Basic inaccuracy* ±(0.5% of reading +0.1 V)  
*Resolution* 0.1 V

**Time measurement**

*Basic inaccuracy* ±0.1% of reading ±1 digit

**Load section**

*Battery voltage* 10 – 60 V DC  
*Max. current* 270 A  
*Max. power* 15 kW  
*Load patterns* Constant current, constant power, constant resistance, current or power profile  
*Current setting* 0-270.0 A (2999.9 A) <sup>1)</sup>  
*Power setting* 0-15.00 kW (299.99 kW) <sup>1)</sup>  
*Resistance setting* 0.1-2999.8 Ω  
*Battery voltage range* 2 ranges, selected automatically at start of test  
*Stabilization (For internal current measurement)* ±(0.5% of reading + 0.5 A)

	<b>Battery voltage</b>	<b>Highest permissible current</b>	<b>Resistor element (Nominal values)</b>
<b>Range 1</b>	10 – 27.6 V	270 A	0.069 Ω
<b>Range 2</b>	10 – 55.2 V	270 A	0.138 Ω

1) Maximum value for a system with more than one load unit

**Inputs, maximal values**

**EXTERNAL CURRENT MEASUREMENT** 1 V DC, 300 V DC to ground. Current shunt should be connected to the negative side of the battery

**EXTERNAL CURRENT START/STOP** Closing/opening contact  
Closing and then opening the contact will start/stop Torkel. It is not possible to keep the contacts in closed position.

*Delay until start* 200 – 300 ms  
*Stop delay* 100 – 200 ms

*Battery* 60 V DC, 500 V DC to ground  
**VOLTAGE SENSE** 60 V DC, 500 V DC to ground  
**SERIAL** < 15 V  
**ALARM** 250 V DC 0.28 A  
28 V DC 8 A  
250 V AC 8 A

**Outputs, maximal values**

**START/STOP** 5 V, 6 mA  
**TXL** Relay contact  
**SERIAL** < 15 V  
**ALARM** Relay contact

**Discharging capacity, examples**

**12 V battery (6 cells) <sup>2)</sup>**

<b>Final voltage</b>	<b>Constant current</b>	<b>Constant power</b>
1.80 V/cell (10.8 V)	0 – 121 A	0 – 1.31 kW
1.75 V/cell (10.5 V)	0 – 117 A	0 – 1.23 kW
1.67 V/cell (10.0 V)	0 – 110 A	0 – 1.10 kW

**24 V battery (12 cells) <sup>2)</sup>**

1.80 V/cell (21.6 V)	0 – 270 A	0 – 5.8 kW
1.75 V/cell (21.0 V)	0 – 266 A	0 – 5.59 kW
1.60 V/cell (19.2 V)	0 – 241 A	0 – 4.63 kW

**48 V battery (24 cells) <sup>2)</sup>**

1.80 V/cell (43.2 V)	0 – 270 A	0 – 11.6 kW
1.75 V/cell (42.0 V)	0 – 270 A	0 – 11.3 kW
1.60 V/cell (38.4 V)	0 – 259 A	0 – 9.9 kW

2) 2.15 V per cell when test starts

**Specifications TXL830/850**

Specifications are valid at nominal input voltage and an ambient temperature of +25°C, (77°F). Specifications are subject to change without notice.

**Environment**

*Application field* The instrument is intended for use in high-voltage substations and industrial environments.

*Temperature*

*Operating* 0°C to +40°C (32°F to +104°F)

*Storage & transport* -40°C to +70°C (-40°F to +158°F)

*Humidity*

5% – 95% RH, non-condensing

**CE-marking**

*LVD* 2006/95/EC

*EMC* 2004/108/EC

**General**

*Mains voltage* 100 – 240 V AC, 50/60 Hz

*Power consumption* 75 W (max)

*Protection* Thermal cut-outs, automatic over-load protection

*Dimensions*

*Instrument* 210 x 353 x 600 mm  
(8.3" x 13.9" x 23.6")

*Transport case* 265 x 460 x 750 mm  
(10.4" x 18.1" x 29.5")

*Weight*

13 kg (28.7 lbs)  
21.4 kg (47.2 lbs) with transport case

*Cable sets*

*for TXL830/850* 2 x 3 m (9.8 ft), 70 mm<sup>2</sup>, 270 A, with cable lug. Max. 100 V. 5 kg (11 lbs)


**Load section**

	<b>TXL830</b>	<b>TXL850</b>
<b>Max. voltage (DC)</b>	28 V	56 V
<b>Max. current</b>	300 A	300 A
<b>Max. power</b>	8.3 kW	16.4 kW

**Internal resistance, 3-position selector**

<b>Position 1</b>	<b>TXL830</b>	<b>TXL850</b>
<i>Current</i>	0.275 Ω	0.55 Ω
100 A	at 27.6 V (12 x 2.3 V)	at 55.2 V (24 x 2.3 V)
78.5 A	at 21.6 V (12 x 1.8 V)	at 43.2 V (24 x 1.8 V)
50.1 A	–	–
39.2 A	–	–
<b>Position 2</b>	<b>TXL830</b>	<b>TXL850</b>
<i>Current</i>	0.138 Ω	0.275 Ω
200 A	at 27.6 V	at 55.2 V (24 x 2.3 V)
156 A	at 21.6 V	43.2 V (24 x 1.8 V)–
<b>Position 3</b>	<b>TXL830</b>	<b>TXL850</b>
<i>Current</i>	0.092 Ω	0.184 Ω
300 A	at 27.6 V	at 55.2 V (24 x 2.3 V)
235 A	at 21.6 V	43.2 A (24 x 1.8 V)
100 A	–	–
78.4 A	–	–



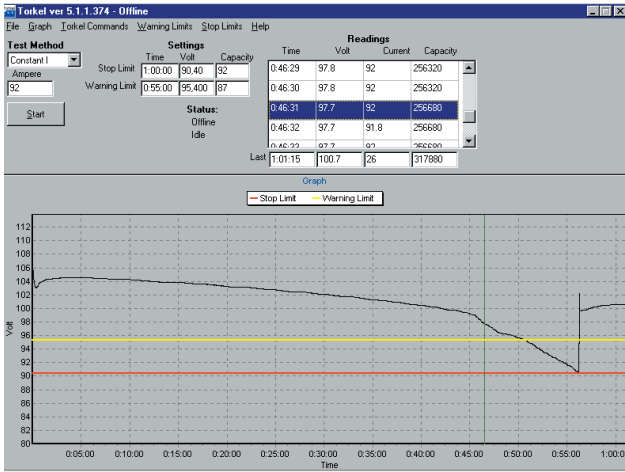

**TORTEL Win PC software**

- Shows the complete voltage curve
- Last recorded time, voltage, current and discharged capacity
- Scroll-window for all recorded values
- Remote control of TORTEL
- Report functions



**Cable set, GA-00554**

**Ordering information**

Item	Art. No.
<b>TORTEL 820</b> Complete with: Cable set GA-00554 Transport case GD-00054	BS-49092
<b>Optional</b> <b>TORTEL Win</b> PC software	BS-8208X
<b>Extra loads</b> TXL830	BS-59093
TXL850	BS-59095
<b>Cable sets</b> Cable set for TXL830 and TXL850 2 x 3 m, 70 mm <sup>2</sup> , with cable lug. Max 100 V 270 A. Weight: 5.0 kg (11 lbs)	GA-00554
<b>Sensing lead set</b> Cable set for measuring voltage at battery terminals. 2 x 5 m (16.4 ft)	GA-00210
<b>Clamp-on ammeters</b> DC clamp-on ammeter, 200 A To measure current in circuit outside TORTEL	XA-12792
DC clamp-on ammeter, 1000 A To measure current in circuit outside TORTEL	XA-12790

**SWEDEN**  
Megger Sweden AB  
Eldarvägen 4, Box 2970  
SE-187 29 TÄBY  
T +46 8 510 195 00  
F +46 8 510 195 95  
E seinfo@megger.com

**UK**  
Archcliffe Road Dover  
CT17 9EN England  
T +44 (0) 1304 502101  
F +44 (0) 1304 207342

**Other Technical Sales Offices**  
Dallas USA, Norristown USA,  
Toronto CANADA, Trappes FRANCE,  
Oberursel GERMANY, Johannesburg  
SOUTH AFRICA, Kingdom of BAHRAIN  
Mumbai INDIA, Chonburi THAILAND  
Sydney AUSTRALIA

Registered to ISO 9001 and 14001  
Subject to change without notice.  
Art.No. ZI-B501E • Doc. BS2642BE • 2010  
**TORTEL-820\_DS\_en\_V01**  
[www.megger.com](http://www.megger.com)  
Megger is a registered trademark